


# DIRECTION 225

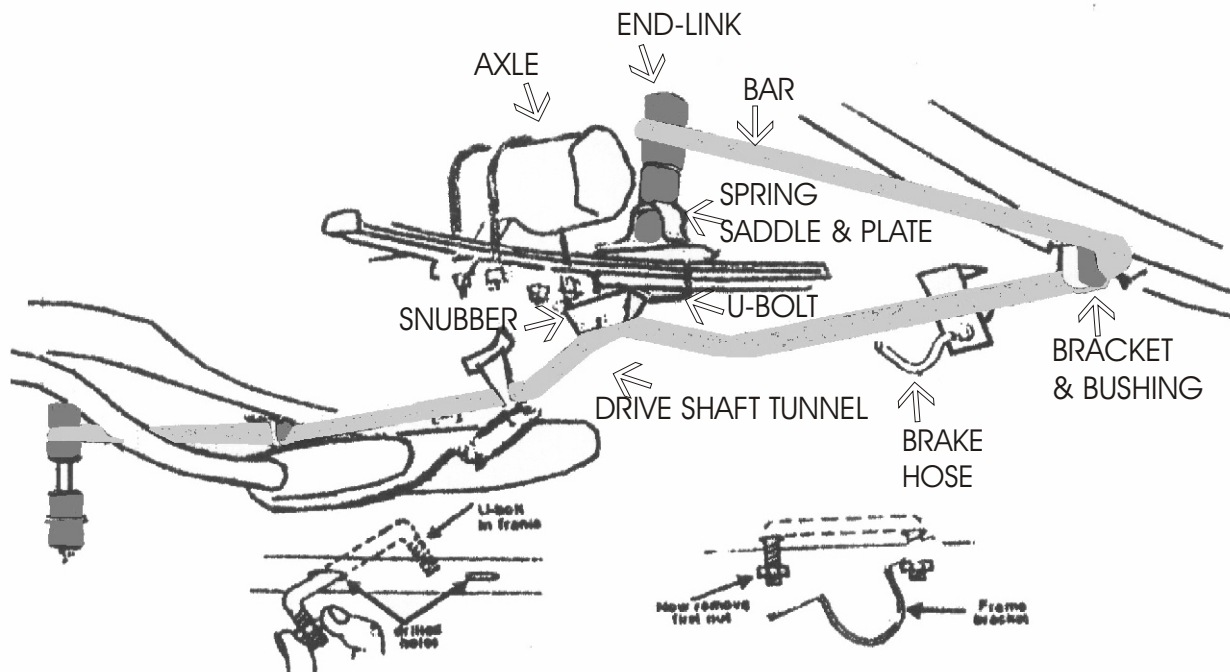

## Direction #225

- Step #1.** Place the spring plates on top of the springs, just forward of the spring saddle. Position them so that the large hole is outboard of the spring. Pass the long U-bolt under the spring and up through the four small holes in the spring plate. Secure them with the nuts provided.
- Step #2.** Place the bar bushing on the bar mid-section near the shoulders, and position the bar under the car as illustrated. The bar passes above the muffler, with the dip in the drive shaft tunnel forward of the rubber snubber, and forward of muffler hanger bracket, but to the rear of the brake line hose bracket. The arms point to the rear.
- Step #3.** Assemble the end-links as illustrated to connect bar eyes and the large holes in the spring saddle.
- Step #4.** Raise bar mid-section up to the frame so the bushings' flat side is against frame bottom. Place the frame bracket on top of the bushing and mark through the holes for drilling. Drill with a 3/8" drill bit.
- Step #5.** Place a nut on one end of the short U-bolt and insert other end into the drilled hole. Maneuver it until it reappears through the other hole. Place the base plate and the bracket on the U-bolt end and start another nut, then remove the first nut and place the free end of the assembly on the U-bolt leg and replace the nut loosely, after positioning the bar through the bracket.
- Step #6.** Slide the mid-section bushing on the bar so it is in the bracket, then tighten the nuts securely.
- Step #7.** Check all fastenings for suitable tightness. Have someone bounce the rear of the car so that you can check for clearance throughout the suspension travel distance. Road test the vehicle to familiarize yourself to its new handling, as we cannot supervise your installation or driving, we cannot be held responsible of more than the cost of the kit.

**NOTE:** For best balance, control and stability this kit should be used in conjunction with our front kit.

### HARDWARE

2	RH 403 U-Bolts	2	RH 031 Plates
2	RH 041 Brackets	2	RH 013 End-Links
2	RH 402 U-Bolts	2	RH 510 Bushings
2	RH 040 Brackets	8	RH 304 Lock-Nuts
4	RH 104 Washers		