
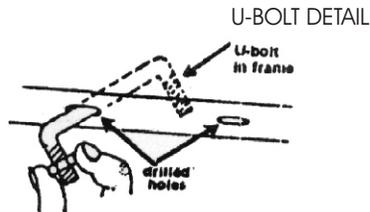
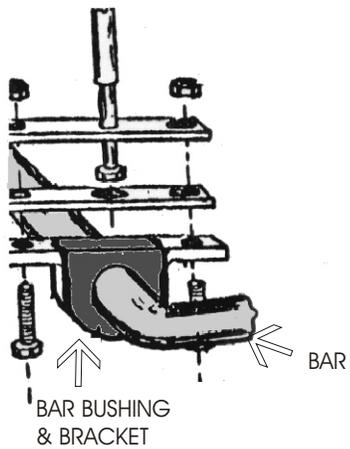
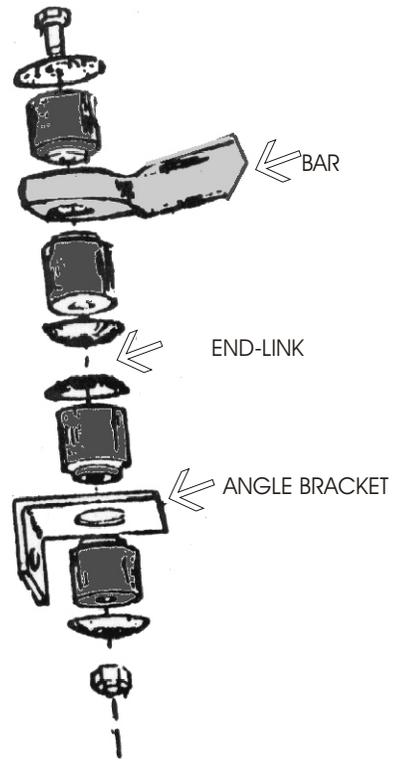
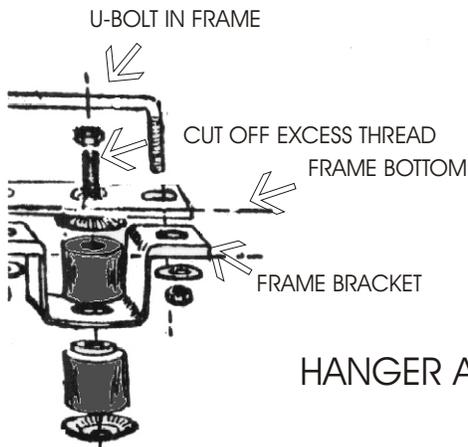


# DIRECTION 379

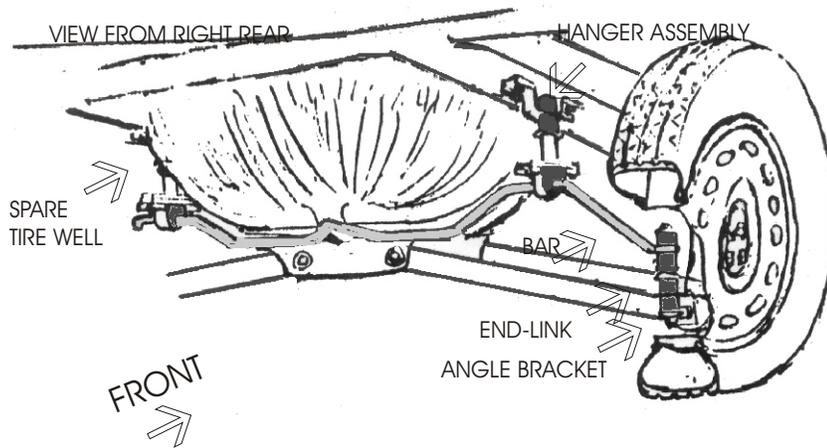

**DIRECTIONS 379****HONDA ACCORD - REAR**

- STEP #1.** Assemble the hanger assemblies as illustrated. Tighten the center bolt so that the bushings are snug, but not distorted. If the threaded end of the bolt is too long, so as to protrude above the frame bracket, cut the excess off. Do not attach the U-bolt to the assembly yet.
- STEP #2.** With the vehicle resting on its wheels, remove the rear nut on the rear suspension arm next to the wheel. Place the angle bracket on it with the horizontal side above the nut and tighten the nut securely.
- STEP #3.** Assemble the end-links so as to connect the angle bracket to the bar eye. Prop up the mid-section of the bar to make the end-link assembling easier.
- STEP #4.** Raise the bar mid-section so that the hanger assemblies contact the bottom of the frame. All of the hangers and end-links should be vertical and the car should be resting on its wheels naturally. Mark the bottom of the frame structure through the holes on the hanger brackets. Using the square U-bolt as a guide to get the correct hole spacing, drill two 3/8" holes in the frame bottom on each side.
- STEP #5.** Place a lock-nut on the end of one of the U-bolt legs. Insert the other end into one drilled hole and then maneuver it until it appears out of the other drilled hole. Using the washers and lock-nuts provided, secure the hanger brackets to the U-bolt legs and tighten to 10 ft/lb.
- STEP #6.** Make sure that all of the nuts are suitably tight. Have someone bounce the rear of the car so you can check that the bar clears throughout the suspension travel distance. Road test the vehicle, so as to accustom yourself to its new handling.

**NOTE:** For best balance and control, this kit should be used in conjunction with our front bar kit #792.

**HARDWARE**

|   |                  |    |                       |
|---|------------------|----|-----------------------|
| 2 | RH 507 Bushings  | 2  | RH 034A Plates        |
| 2 | RH 034B Plates   | 2  | RH 066 Tubes          |
| 4 | RH 500 Bushings  | 4  | RH 109 Cupped Washers |
| 2 | RH 041 Brackets  | 2  | RH 402 U-Bolts        |
| 8 | RH 213 Bolts     | 10 | RH 304 Lock-Nuts      |
| 2 | RH 013 End-Links | 2  | RH 023 Angle Brackets |
| 4 | RH 104 Washers   | 2  | RH 205 Bolts          |
| 2 | RH 040 Brackets  |    |                       |