


DIRECTION 314

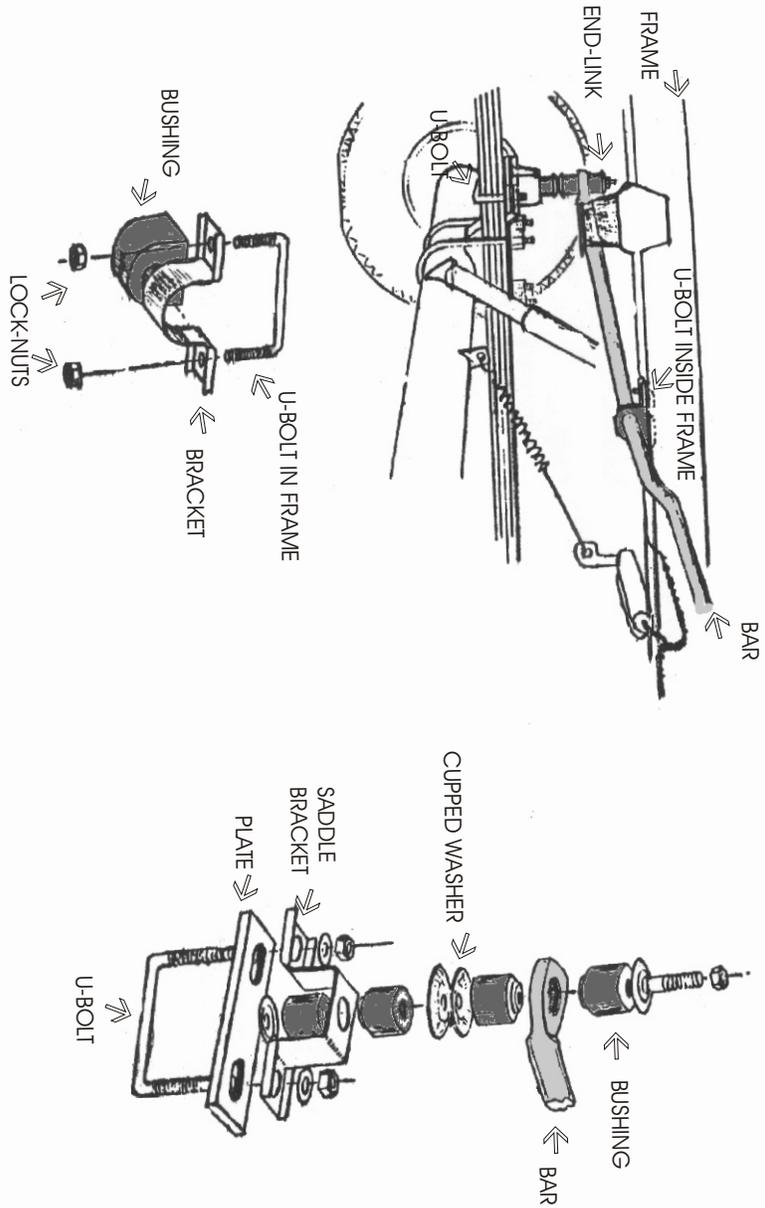

DIRECTIONS 314

- STEP #1.** With vehicle on stands being sure suspension is compressed in normal driving position. Assemble end-links and support brackets as per detailed instructions. Now mount assembly on spring to back of axle.
- STEP #2.** Assemble bar onto end-links and assemble mid-section bushings and frame brackets onto bar. Now move bar into position on frame of vehicle and mark frame for drilling. With a 3/8" drill bit, drill frame and install U-bolt, raise bar into position install lock-nuts provided in kit. Tighten all fastenings to proper torque and lower vehicle to the ground.
- STEP #3.** Have someone bounce the vehicle to check for clearance throughout the suspension travel. As we cannot supervise your installation, or your driving, we cannot be held responsible for more than the cost of the kit.

HARDWARE

2	RH 402 Frame U-bolts	2	RH 040 Frame Bracket
2	RH 507 Bushings	8	RH 304 Lock Nuts
2	RH 041 Saddle Plates	2	RH 031 Plates
2	RH 013 End-Links	4	RH 104 Washers
2	RH 403 U-bolts		