

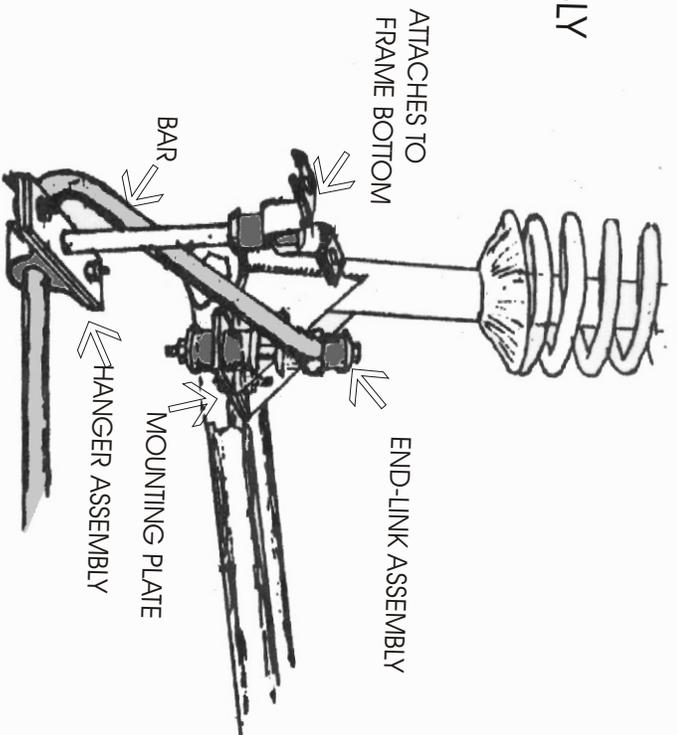


# DIRECTION 397

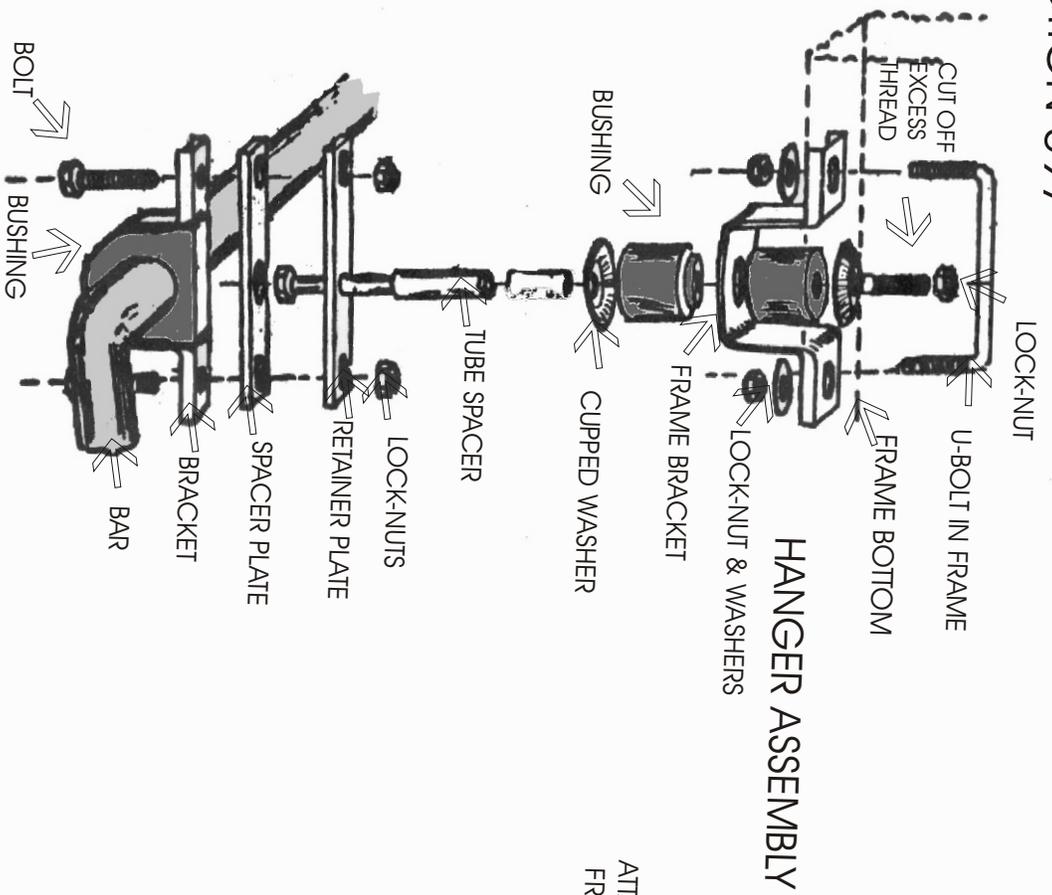

CUT-AWAY VIEW OF STRUT AND SUSPENSION SEEN FROM REAR

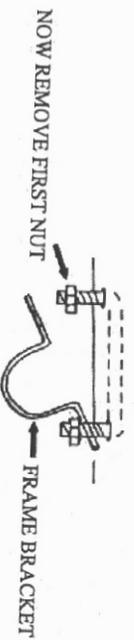

## **DIRECTIONS 397 EARLY MODEL TEMPO - REAR**

- STEP #1.** Mount the flat plate with the 3/8" X 5/8" hole. It attaches to an existing hole on the brace just inboard of the bottom of the shock. The 5/8" hole is to the rear between the brace and the rear suspension arm. Now assemble the end link so as to connect the bar eye and the 5/8" hole. Bar mid-section is to the rear and the forged eyes should be horizontal while the bar arm slopes down to the rear so that the bar mid-section is lower than the eye.
- STEP #2.** Assemble the mid-section hanger, located near the bar bends, as illustrated. Do not assemble the U-bolt yet. Tighten the lock-nut at the top of the assembly until the bushings are mildly compressed. Cut off any excess thread.
- STEP #3.** Tie mid-section of bar up to underside of car with a piece of string to facilitate marking. Mark frame bottom through frame bracket holes (check exact hole spacing with the U-bolt.)
- STEP #4.** Start a lock-nut on one end of the U-bolt and insert the other leg through one hole in the frame bracket then into the frame structure. Maneuver it until it reappears through the other drilled hole and the other end of the frame bracket. Secure with another lock-nut, tighten both to 10 ft/lb.
- STEP #5.** Installation is now complete. Check all fastenings for suitable tightness. Have someone bounce the rear of the car so that you can check and make sure that all parts clear throughout the suspension travel distance.
- STEP #6.** Road test the car to accustom yourself to its new handling. As we cannot supervise your installation, or your driving, we cannot be responsible for more than the cost of the kit.

### **HARDWARE**

2 RH 507 Bushing	2 RH 040 Brackets
2 RH 034A Plates	6 RH 214 Bolts
10 RH 304 Lock-Nuts	2 RH 065 Tube Spacers
4 RH 107 Washers	4 RH 500 End-Link Bushings
2 RH 041 Bracket	2 RH 402 U-Bolts
2 RH 014 End-Links	2 RH 615 Plates
8 RH 104 Washers	2 RH 209 Bolts
2 RH 307 Lock Nuts	2 RH 034B Plates