



DIRECTION 410

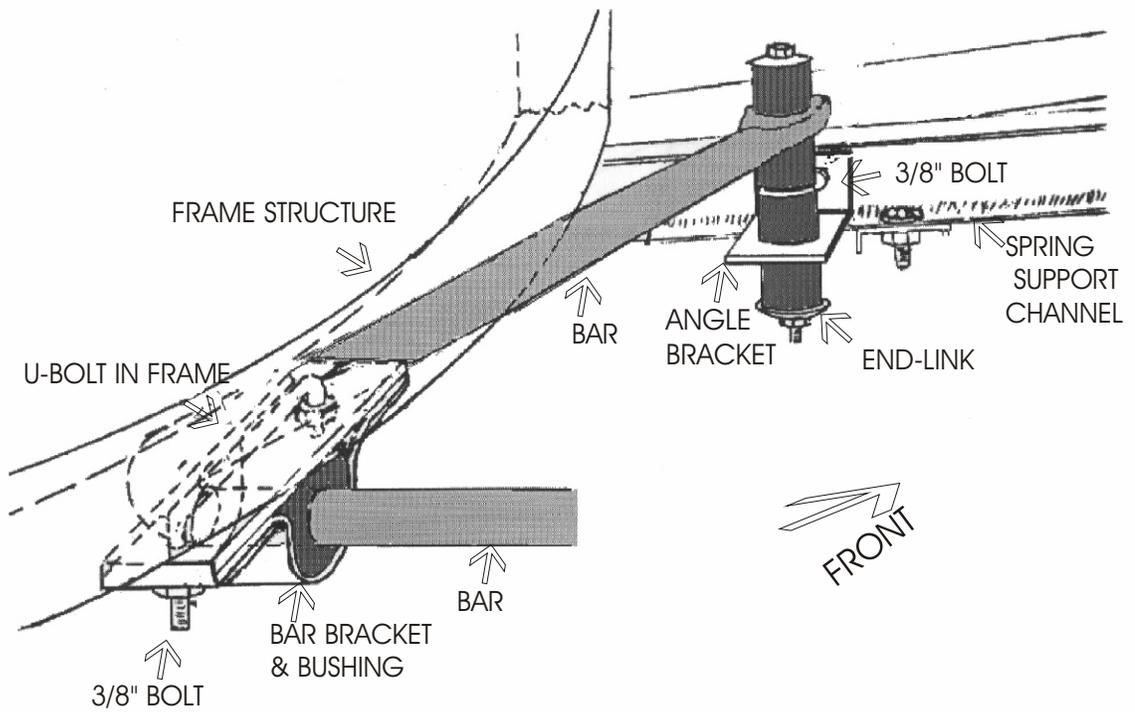

HOW TO INSTALL A U-BOLT

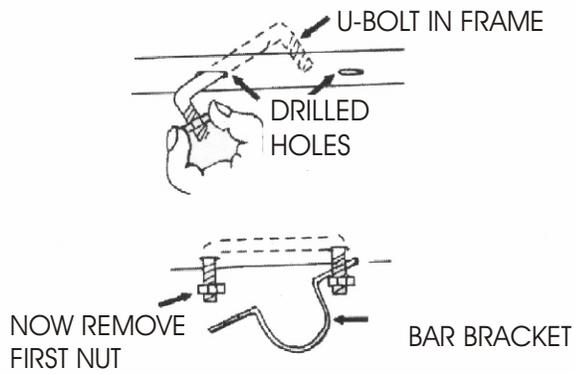

DIRECTION 410

YUGO REAR

- STEP #1.** Loosely assemble end-links as illustrated so as to connect bar eye and angle bracket. The angle bracket and/or the whole end-link assemble may be put together the other way up if better alignment is attained for the particular height of your cars frame relative to the a-arms. Bar eye may thus be below the angle bracket or it may be as illustrated but with the angle the other way up.
- STEP #2.** Position the bar so that the angle brackets locate on the rear of the a-arms. With the bar centered on the car. Mark through angle brackets and drill the rear side of the a-arms with a 3/8" drill bit. This will be just outboard of the spring support channel.
- STEP# 3.** For convenience, tie the mid-section of the bar up and connect end-link assemblies to the a-arms. End-links will have to be disassembled so as to pass the 3/8" bolt through the angle. The bar bushings should be placed on the bar against the frames. Place the bar brackets over the bushings and mark the frame. Drill with a 3/8" drill bit as the frames are at an angle to the length of the car at this point. The bracket will touch the sheet metal lip on the rear outside corner and will hang over the frame on the inboard side.
- STEP #4.** Place a lock-nut on the end of the u-bolt and insert the other end through the end of the frame bracket and then into the frame. Maneuver until it reappears through the other hole and then place the other end of the bracket over the u-bolt and secure it with the other lock-nut. The end-links should tilt up and out so as to align with the a-arm angle bracket.
- STEP #5.** Check all bolts for proper tightness. Have someone bounce the rear of the car so you may check the bar's clearance throughout suspension travel. Road test the car to familiarize yourself with it's handling. As we cannot supervise your installation or your driving we cannot be responsible for more than the cost of the kit.

HARDWARE

2 RH 013 End-Links	2 RH 510 D-Bushings
2 RH 040 Frame Brackets	2 RH 022 Angle Brackets
2 RH 402 U-Bolts	6 RH 304 Lock-Nuts
2 RH 214 Bolts	