



Part 655 Nissan Maxima 95-99

8-22-2005

- Step 1.** Place the D-bushing around the mid-section of the bar near the bends. Hang the U-bolts over axle as shown in the illustration. Next place the mid-section brackets over the D-bushings then maneuver the bracket along with the base plate over the legs of the U-bolt and secure with the fasteners provided tighten assembly just enough so that final adjustments can be made. Repeat for other side. NOTE: Make sure that the contour of the arms are such that they will clear exhaust and that the ends of the bar line up with the center of the trailing arms.
- Step 2.** Place the D-bushings over the ends of the bar on each side. Rotate the bar up so that it lines up with the inside center of trailing arms. While holding the end of the bar up, place the base plate between the inside of the trailing arm and the flat side of the bushing. Maneuver the square U-bolt around the trailing arm, then through the base plate and bracket. Secure with fasteners provided but leave loose enough so that you can move the assembly for adjustment. Repeat for other side.
- Step 3.** Now make final adjustments on mid-section attachments so that they are as close to the bends as possible. Tighten to 25 ft./lbs., or until base plate starts to deform.
- Step 4.** Make final adjustments at the end of the bar so that both sides are an equal distance from the end. Note: This bar you can adjust the rate the bar pus out by sliding the assembly. Towards the end of the bar it decreases it. Tighten assemblies to 25 ft./lb.
- Step 5.** Installation is now complete. Make sure that all fasteners are tight and that the bar does not interfere with any other suspension components. Road test the vehicle to familiarize yourself with the vehicles new handling. Since we cannot supervise your installation or your driving, we cannot be held responsible for more than the cost of the kit.

Hardware

2 RH 031 Base Plates

4 UB 612W Mid-Section Bushings

8 RH 304 Lock-Nuts

2 RH 031 MOD Base Plates

4 RH 043W Mid-Section Brackets


8 RH 104 Flat Washers

2 RH 405 MOD U-Bolts

2 RH 402 MOD U-Bolts

DIRECTION 655

FOR TRAILING ARM

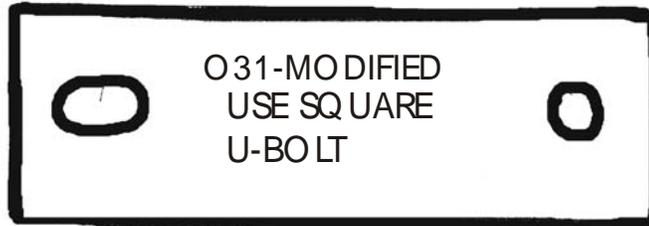

FOR AXLE

