



DIRECTION 732

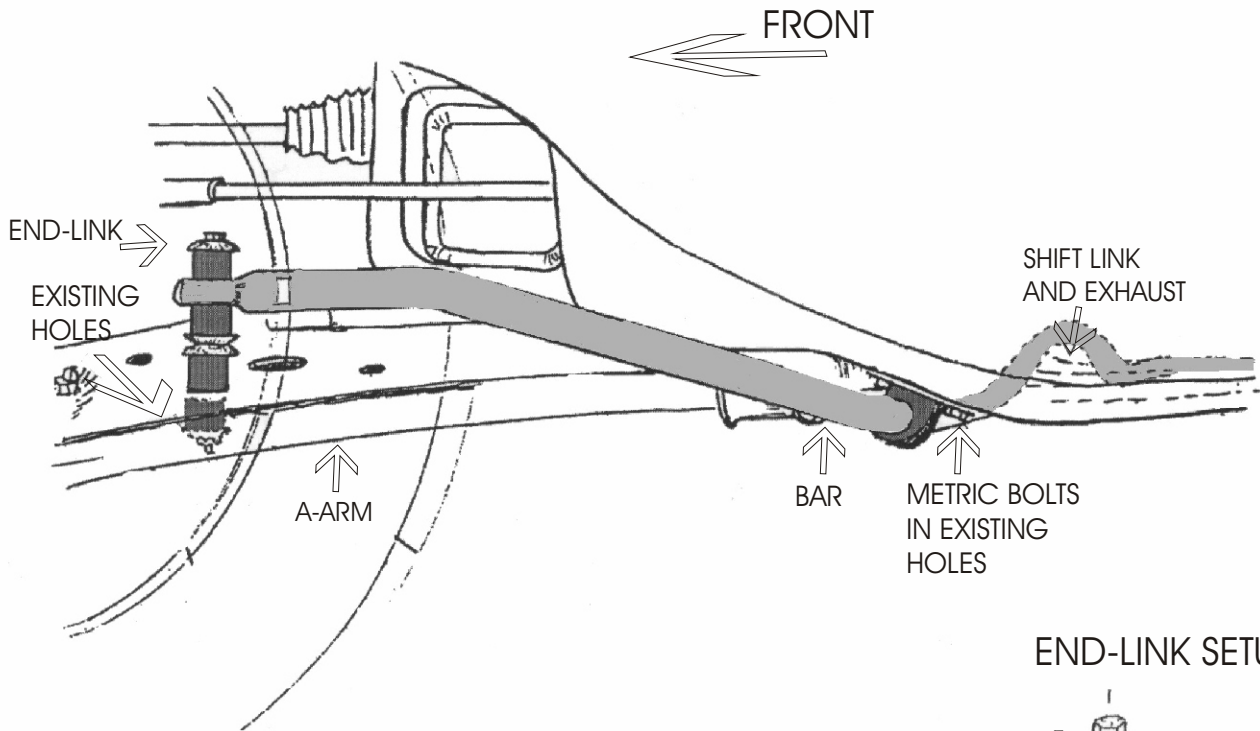

END-LINK SETUP

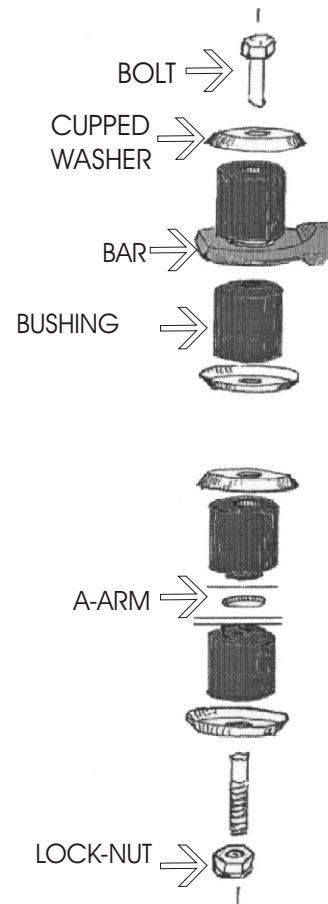

DIRECTIONS 732 NISSAN SENTRA-FRONT

- STEP #1.** **Position the bar behind the front wheels with arms forward, over the suspension A-arms with the center dip passing over the exhaust and shift linkage. It can be easily done if the exhaust hangers are temporarily undone.**
- STEP #2.** **Slip the D-shaped bar bushing onto the bar. Place the bar brackets over the D-shaped bushing and align holes in bracket in existing holes in bottom of frame rail. With the metric bolts provided thread them into existing holes and tighten to 10 lbs/ft.**
- STEP #3.** **Assemble the end-links as illustrated so it connects to the bar eye to the existing hole in the A-arm. It is the hole with the small (5/8" approx.) hole in the top side of the A-arm and the larger (1-1/4" approx.) hole in the bottom side of the A-arm. Tighten the end-link bolt only enough to keep the assembly snug.**
- STEP #4.** **The installation is now complete. Bounce the front of the car and turn the wheels lock to lock to make sure everything clears. Road test the car to familiarize yourself to its new handling. As we cannot supervise your installation or your driving, we cannot be responsible for more than the cost of the kit. Note: For best highway tracking and balance and flatness on corners, this kit should be used in conjunction with our front KIT #361.**

HARDWARE

2 UB 613W Bushings	1 RH 072A Bracket
1 RH 072B Bracket	2 RH 013 End-links
4 RH 211 Bolts	4 RH 104 Washers